

## Chapter Eighteen (a): Standard Port-Forwarding

### Summary of Chapter:

- 🔑 How to set up port-forwarding on your Pilot with the Standard Firewall.

### What you need:

- 🔑 Knowledge of Admin user account and valid password for your Pilot.
- 🔑 Details of the service and the IP address for the PC providing the service to be forwarded.


### Software Revision Required:

- 🔑 Applicable to software revision 5.2.0 > NetPilots

(NetPilot will be referred to as 'Pilot'. All image examples are of a NetPilot.)

### Port-forwarding:

- 🔑 Log on to the Pilot as shown in Chapter One (b).
- 🔑 From the left-hand side of the screen, select 'Firewall' and then 'Port-forward targets'. (All links are highlighted below).

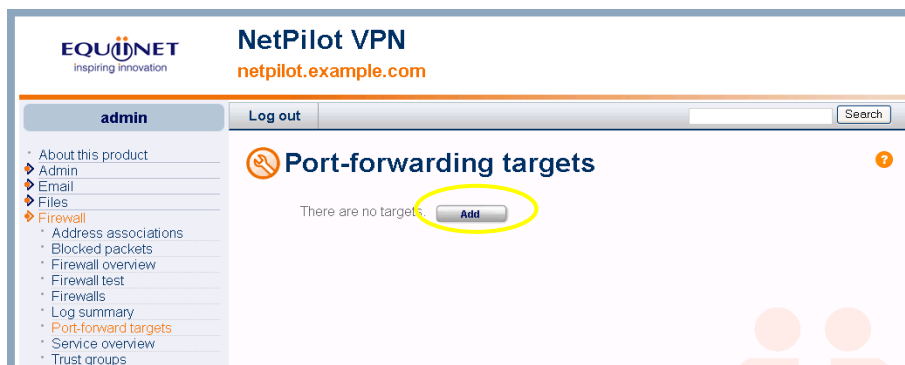

- 🔑 You will be presented with the above screen, select the 'Add' button, as highlighted.

- 🔑 After selecting the 'Add' button, you will see the below screen, enter the following details:

- 🔑 'Name': enter a name for the port-forwarding target. This must not contain any special characters.

- 🔑 'Target IP Address': enter the IP Address that you wish to port-forward to.

- 🔑 'Forwarding firewall service': select the port-forwarding service you want from the drop-down list provided.





**Tip!**


If you want to select a service not shown in the list, you must have the advanced firewall licence on your Pilot. Please see Chapter 18 (b) for further information on advanced port-forwarding.


- 🔑 Once you have selected a service, select 'OK'.


 You will see a similar screen as below.

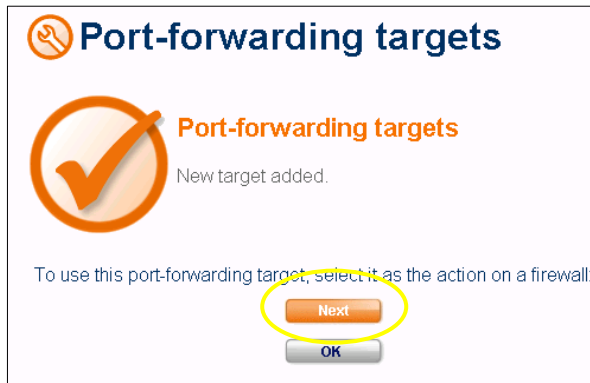

 Select the 'Next' button as highlighted left.

 You will be presented with a similar screen as below. Select the decision you want from one of the drop down list given. Each drop down list is link to the different sections of the firewall.

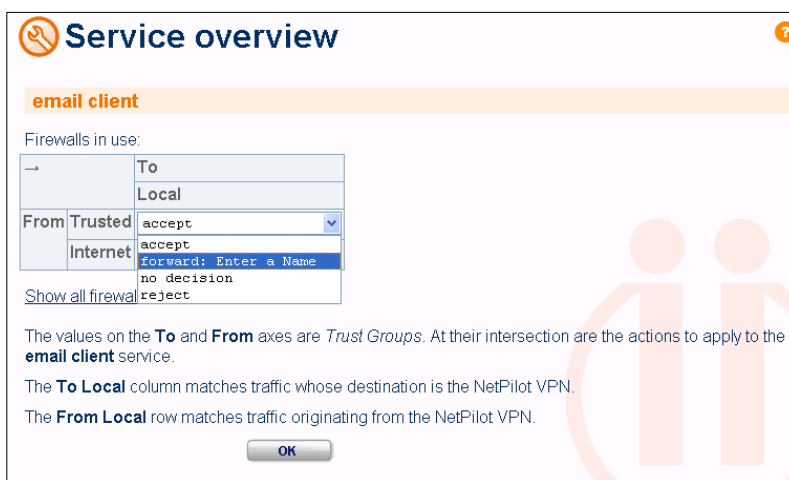

 Once you have selected the option you want, select 'OK' and 'OK' again to confirm.



When deleting a profile, you will need to deactivate it from the firewall section you placed it in. Once you have deactivated it, you can delete it in the 'Port-forwarding targets' main screen. To do this, select the port-forwarding profile you want to delete from the list given and select the 'Delete' button.