

Chapter Five (d): Allowing FTP from Trusted to Internet

Summary of Chapter:

- 🔑 How to allow FTP from Trusted to Internet on the Standard Firewall.

What you need:

- 🔑 Knowledge of Admin user account and valid password for your NetPilot.

Software Revision Required:

- 🔑 Applicable to software revision 5.1.4 > NetPilots

Allowing FTP with the Standard Firewall:

- 🔑 Log on to the NetPilot as shown in Chapter One (b).

- 🔑 From the left-hand side of the screen, select 'Firewall' and then 'Firewall Overview'. (All links are highlighted below).

From	To	Action
Local	Local	accept
Local	Trusted	Local/Trusted
Local	Internet	Local/Internet
Admin	Admin/Local	.
Trusted	Trusted/Local	accept
Trusted	Internet	Trusted/Internet
Internet	Internet/Local	drop
Internet	Internet/Internet	drop

- 🔑 Select the 'Trusted/Internet' link from the firewall table as highlighted above.

- 🔑 You will be presented with the below screen:

Firewalls

Trusted/Internet

Used in relationship: Trusted to Internet

Service list:

secure web: no decision

web: no decision

ICMP: no decision

any: accept

OK

Cancel

- 🔑 Select 'accept' from the 'any' drop down list, as highlighted.

- 🔑 Then select 'OK' and 'OK' again to confirm.