

Chapter Five (f): Allowing Remote Access for a specific IP range

Summary of Chapter:

- How to add a specific IP Address or Range to the ADMIN Trust Group for remote Admin access.

What you need:

- Knowledge of Admin user account and valid password for your NetPilot.

Software Revision Required:

- Applicable to software revision 5.2.0 > NetPilots


Adding a Specific IP Address:

- Log on to the NetPilot as shown in Chapter One (b).
- From the left-hand side of the screen, select 'Firewall' and then 'Firewall Overview'. (All links are highlighted below).




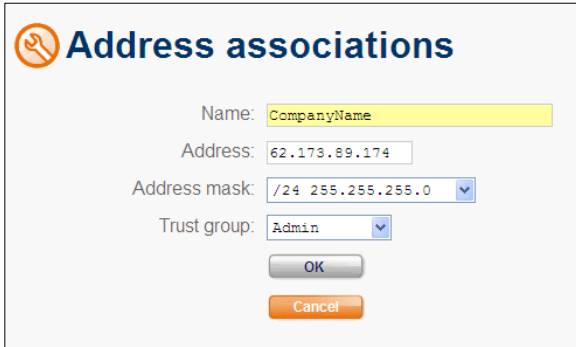
- Select the 'Admin' link from the firewall table as highlighted above.


- You will be presented with the below screen:

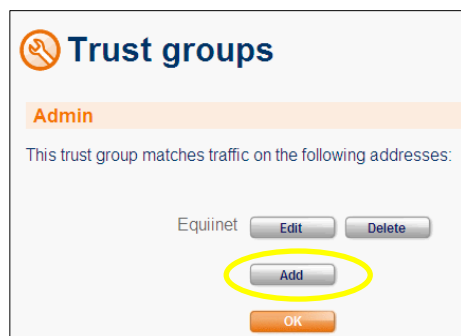


- Select the 'Add' button as highlighted left.


 In the below screen, enter the following detail:




 'Name': A name for your address association. This profile most not contain any special characters.

 'Address': The static IP address (See Tip below)

 'Address Mask': Select the appropriate Address Mask from the drop down list provided.

 'Trust Group': Leave as 'Admin'.

 Select 'OK' and 'OK' again.



To find the specific static IP Address of the computer, enter the following URL in a Web Browser, and it will display your static IP Address.

<http://www.netpilot.com/ip>