

Chapter Five (g): Remote access from any Address

Summary of Chapter:

- 🔑 How to gain remote access from any address to the NetPilot.

What you need:

- 🔑 Knowledge of Admin user account and valid password for your NetPilot.


Software Revision Required:

- 🔑 Applicable to software revision 5.2.0 > NetPilots

Remote access:


- 🔑 Log on to the NetPilot as shown in Chapter One (b).

- 🔑 From the left-hand side of the screen, select 'Firewall' and then 'Firewall Overview'. (All links are highlighted below).

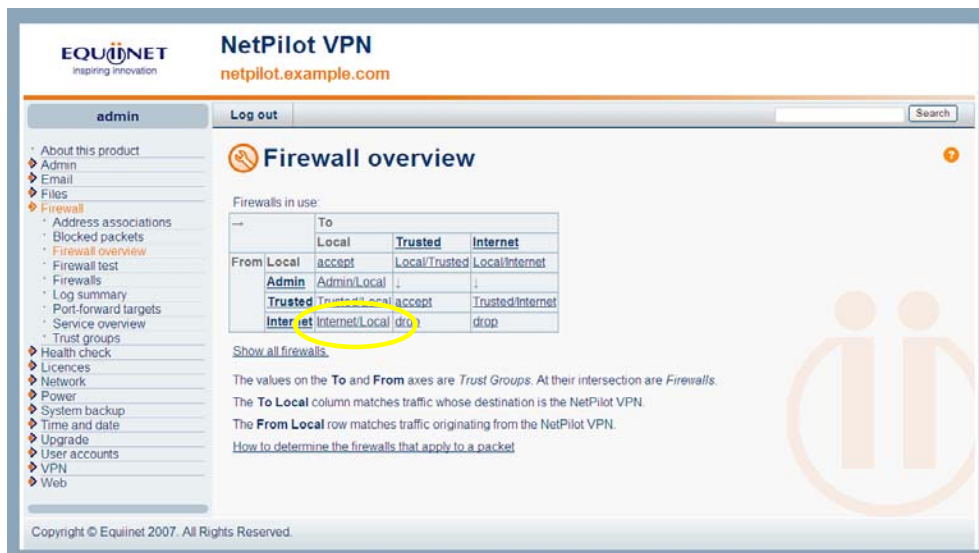

- 🔑 Select the 'Internet/Local' link from the firewall table as highlighted above.

- 🔑 You will be presented with the below screen:

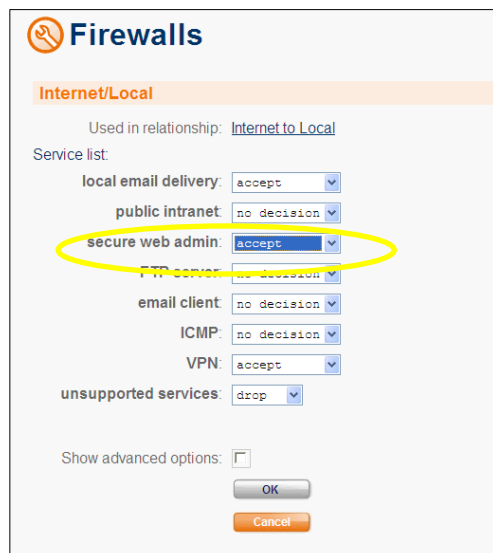

- 🔑 Select 'Accept' from the 'secure web admin' drop down list as highlighted left.

- 🔑 Select 'OK' and 'OK' again to confirm.