

Chapter Five (bf): Allow Outgoing Connections

Summary of Chapter:

- 🔑 How to allow outgoing connections.

What you need:

- 🔑 Knowledge of Admin user account and valid password for your NetPilot.


Software Revision Required:

- 🔑 Applicable to software revision 5.2.0 > NetPilots

5bf:

- 🔑 Log on to the NetPilot as shown in Chapter One (b).

- 🔑 From the left-hand side of the screen, select 'Firewall' and then 'Firewall Overview'. (All links are highlighted below).

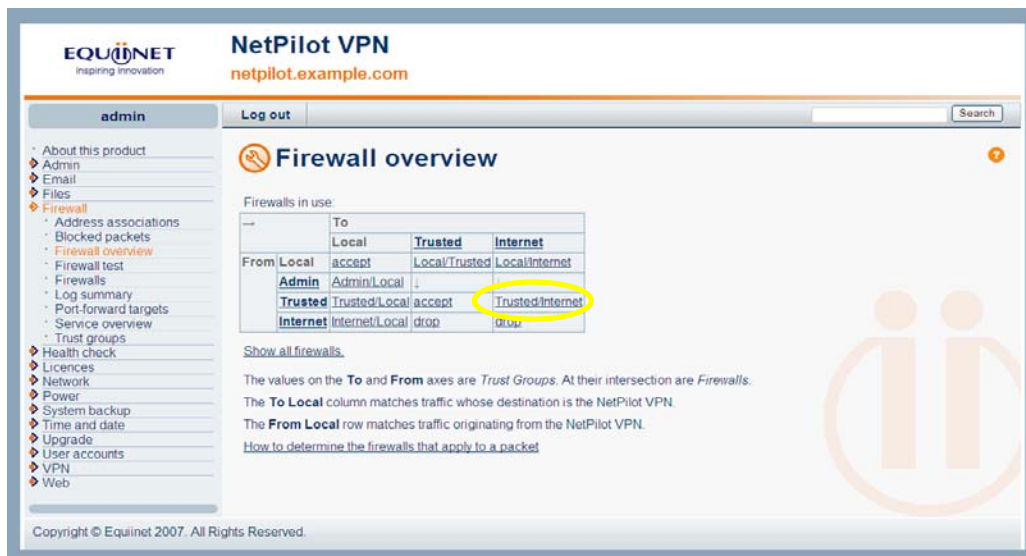

- 🔑 Select the 'Trusted/Internet' link from the firewall table as highlighted above.

- 🔑 You will be presented with the screen below.



- 🔑 Select 'accept' from the 'any' drop down list as highlighted left.

- 🔑 Select 'OK' and 'OK' again to confirm.