

## Chapter Seven (a): Changing the cache size

### Summary of Chapter:

- How to change the size of the cache on your Pilot.

### What you need:

- Knowledge of Admin user account and valid password for your Pilot.
- What percentage you would like to change the cache size to.


### Software Revision Required:

- Applicable to software revision 5.2.0 > Net/CachePilots

(Net/CachePilot will be referred to as 'Pilot'. All image examples are of a NetPilot.)

### Changing the size of the cache:

- Log on to the Pilot as shown in Chapter One (b).
- From the left-hand side of the screen, select 'Web', then 'Cache' and then 'Cache Size'. (All links are highlighted below).

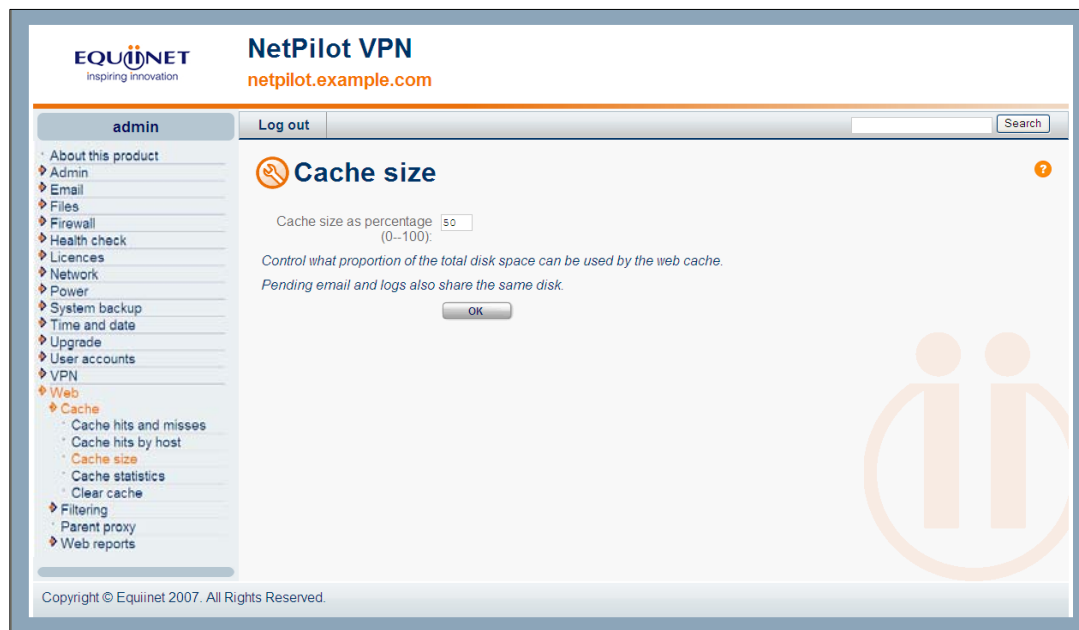

- Change the proportion of the total disk space by placing the percentage in the box provided.



The default amount for the NetPilot is 50%.

The default amount for the CachePilot is 90%.

- Once you have entered the percentage select 'OK' and 'OK' again to confirm.



On your CachePilot we recommend you to 'Clear the Cache' every now and then to keep the CachePilot up-to-date. Please see Chapter 7(b) for more information on how to do this.