

## Chapter Seven (e): Setting the Time and Date

### Summary of Chapter:

- How to set the Time and Date manually.

### What you need:

- Knowledge of Admin user account and valid password for your Pilot.
- The current date and time


### Software Revision Required:

- Applicable to software revision 5.2.0 > Net/CachePilots

(Net/CachePilot will be referred to as 'Pilot'. All image examples are of a NetPilot.)

### Setting the time and date:

- Log on to the Pilot as shown in Chapter One (b).
  - From the left-hand side of the screen, select 'Time and date' and then 'Clock Settings'.
- (All links are highlighted below).

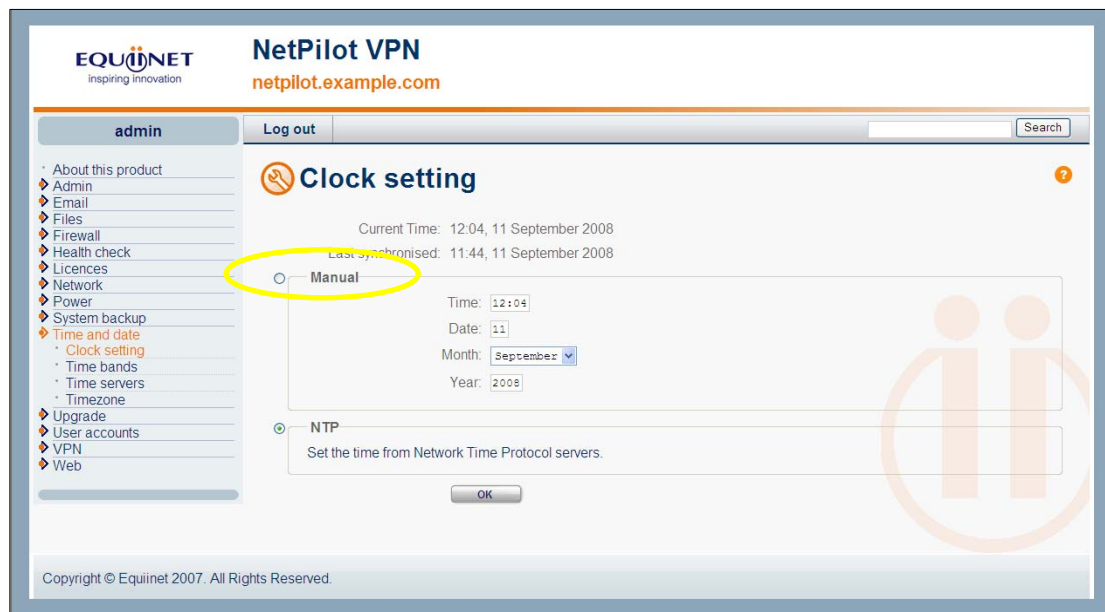

- You will be presented with the screen shown above.

- Select the 'Manual' radio button (which is highlighted) and then enter or change the date and time.

- Once you are happy with the change/s, select 'OK' and 'OK' again.



Using 'NTP' is recommended, as the manual settings should only be used when NTP isn't reachable. If the clock is so far off that NTP refuses to work, it may be necessary to set it manually then change back to automatic.