

Chapter Nine (b): Deleting a DNS Server

Summary of Chapter:

- How to delete a DNS Server from your Pilot.

What you need:

- Knowledge of Admin user account and valid password for your Pilot.

Software Revision Required:


- Applicable to software revision 5.2.0 > Net/CachePilots

(Net/CachePilot will be referred to as 'Pilot'. All image examples are of a NetPilot.)

Deleting a DNS Server:

- Log on to the Pilot as shown in Chapter One (b).

- From the left-hand side of the screen, select 'Network' and then 'DNS Servers'. (All links are highlighted below).

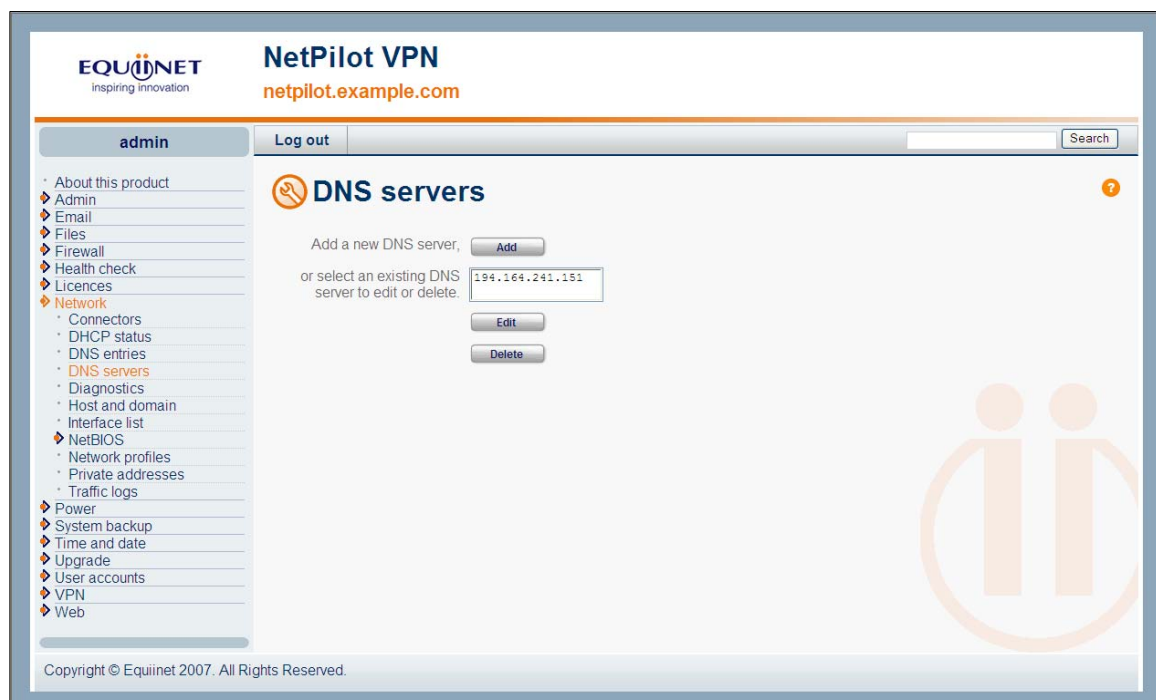

- You will be presented with the screen shown above.

- Select the DNS Server, which you wish to delete and select the 'Delete' button

- Confirm by clicking 'OK', and 'OK' again